


## **U3 Mode Application Note**

Backward Compatibility Simplified

The U3 Mode on the new HypotULTRA® series allows you to emulate the interface commands and structure of the HypotULTRA® III, making it a drop-in replacement for the previous model. This allows HypotULTRA® III users to integrate the new model into existing test systems without making any changes to their control software. The U3 Mode option is available on models 7820 and 7850.

## **U3 Mode Operation**

You will enable the U3 Mode from the SETUP SYSTEM menu. Note: This selection is only available if you have purchased Option 14, Mimic HU3 Command Set.

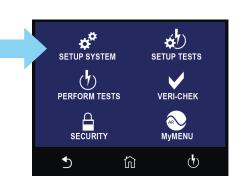


Tap SETUP SYSTEM




Next, tap HARDWARE



From the HARDWARE Menu, scroll down to U3 Mode

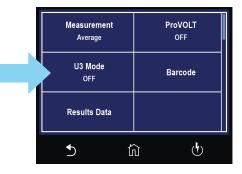

Next, Tap U3 Mode

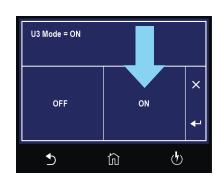


Tap "ON" to enable Mode

© Associated Research

## **U3 Mode Application Note**

Backward Compatibility Simplified

Once the U3 Mode is set to ON, the color of the touchscreen display will change:

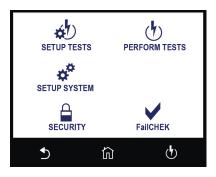

In U3 Mode all the features of the HypotULTRA® III are available:

- The bus command structure of the previous model.
- The Baud rate setting for the COM port changes to 9600 to mimic the previous model.
- All exclusive HypotULTRA® III bus commands. (Some bus commands are common between the new and the older model and some bus commands are exclusive to each model)

Note: A full list of bus commands is available under Section 8 of the HypotULTRA® III product manual or in the Options section.

When U3 Mode is active, all new features and functions of the HypotULTRA® are not available for use. The following table lists the lost features and functions:

	HypotULTRA	U3 Mode
File Structure	2000 Steps (200 steps/test file)	50 Memories (30 steps/mem)
ProVOLT®	Yes	No
Multiple Languages	Yes	No
BatchTEST®	Yes	No
Onboard Data Transfer	Yes	No
Negative DCW	Yes	No
Onboard Barcode	Yes	No
Nano-amp Resolution	Yes (DCW Test)	No
IR Test up to 6 kV	Yes	No (1000 V max IR output)

© Associated Research 2